


Assembly of 250AVX Complete Anti-vibration Assembly



Replacement of Standard A660 Standard Jackleg Backhead and A697 Control Handle instruction guide

Place the drill in a suitable vice on the work bench gripping the front end of the drill.

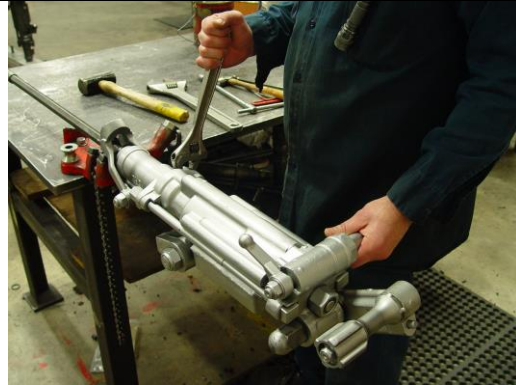

Remove the complete assembly of the backhead, handle and all components from the drill.



Place the used backhead and handle assembly on the bench to recover parts for further use.



Unpack the AV250X Complete Anti-Vibration Backhead Assembly.



Slide the AV250X Assembly into the drill body and with the side rods in place tighten the side rod nuts to proper torque.



New PHQ250JHMAVL Jackleg Drill is ready for use.

